#### WARRANTY

We'll do what it takes to keep your SureFire gear running smoothly. SureFire warrants that if you — our customer — purchase one of our products, and we determine that it is defective in material and/or workmanship during your lifetime, we will repair or replace it — no hassle!

Our warranty does not cover consumables or normal wear-and-tear — things like batteries draining, headbands and headpads wearing out, ink cartridges running out, and switches wearing out — or damage resulting from abuse, alterations, unauthorized repairs, or use contrary to SureFire's user manuals.

Should you need a replacement product, SureFire reserves the right to replace an obsolete product with a current production, like model. In the event that any issue with a SureFire product is not covered under this warranty SureFire can arrange to have the product repaired for a reasonable fee.

#### STANDARD DISCLAIMER

Except as specified above or prohibited by applicable law: all express or implied conditions and warranties, including, without limitation, any implied warranty or condition of merchantability or fitness for a particular purpose, or accuracy of any informational content, are hereby excluded and disclaimed by SureFire; and in no event will SureFire be liable for any special, direct, indirect, consequential, incidental or punitive damages howsoever arising and regardless of the theory of liability, even if advised of the possibility of such damages. Products, prices, availability, specifications, and offers are subject to change or cancellation at any time without notice.

#### WARRANTY CLAIMS

For repair or replacement contact Customer Service at 714-545-9444 and obtain a Return Merchandise Authorization number (RMA#).

Then package the unit carefully and return (no CODs please) to:
SureFire, LLC.

Repairs Department, RMA# 17680 Newhope Street, Suite B Fountain Valley. CA 92708

SureFire will pay any reasonable shipping costs to return the unit to you.



18300 MT. BALDY CIRCLE

FOUNTAIN VALLEY, CA 92708-6122 WWW.SUREFIRE.COM Revision A 10-2019 71-01-1104 RSR-SR07


F© C € 🙎 🍪



# REMOTE SWITCH FOR RIFLES

FOR XVL2 & XVL2-IRC

RSR-SR07

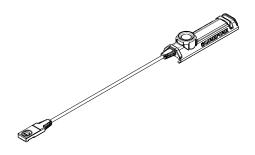

### REMOTE SWITCH FOR RIFLES

#### **MOMENTARY & CONSTANT ON OPERATION**

#### **▲** WARNING

ALWAYS confirm weapon is unloaded and on SAFE before attempting installation.

For momentary-on light operation: press and hold either the right or left side of tailcap toggle switch (A) or apply pressure to the RSR (B); release to turn light off.

For constant-on operation using the XVL2 rear switch: rotate tailcap toggle switch up or down (C); rotate in the opposite direction to turn light off.

**For constant-on operation using the RSR-SR07,** press pushbutton until it clicks (D); click again to turn light off.

## REMOTE SWITCH INSTALLATION

- 1. Use a 5/64" hex wrench to remove plate cover. Store for future use.
- Align RSR switch pin contacts with contact pads, RSR clamp and screw holes on top of the weaponlight body. (Figure 1)
- 3. Replace socket head screws into holes and screw into body using a 5/64" hex wrench.

# **A** CAUTION

DO NOT OVERTIGHTEN.

## **ACCESSORIES**

SureFire makes a full line of accessories for most of its illumination tools. For a complete listing, visit www.surefire.com/partsaccessories.

